

# LF-ADD060-1500-54

#### AC220-240V DALI Dimmable Constant Current LED Driver



### **Product family features**

- DALI&PUSH dimmable
- Dimming range: 1-100%
- High efficiency up to 90%
- THD<10%
- Suitable for Class II light fixtures
- 5 years guarantee



# **Product family benefits**

- Advanced functions: EL, CorridorDIM, CLO
- DALI-2 part ext. 251, 252 and 253
- Parameters set via programmer
- Surge level: PUSH: 1kV, L-N: 2kV

# Typical applications

- For panel light
- For office, commercial and home lighting

## **Product parameters**

- Output current 750-1500mA
- Output power 40.5-60W
- Input voltage 198-264Vac

- Output voltage 15-54Vdc
- Efficiency 90%

# **Electrical data**

ln	put	data

Rated supply voltage	220 240V
AC voltage range	198 264V
Mains frequency	50/60Hz
DC voltage	180 264V
Power factor	≥0.95
Efficiency	≥90 %
THD	<10%
Input current	0.4A Max
Inrush current	41A <sup>1)</sup>
Loading number on circuit breaker 10 A (B)	13
Loading number on circuit breaker 10 A (C)	18
Loading number on circuit breaker 16 A (B)	21
Loading number on circuit breaker 16 A (C)	30
Protective conductor current	≤0.7mA
Power input on stand-by	≤0.3W

# Output data

Nominal output voltage	1554V
Nominal output current	7501500mA
Default output current	1500mA
Current set	DIP switch (For the output current corresponding to DIP switches, see DIP switch definition)
Maximum output power	60W
Nominal output power	40.5 60W
Output ripple current (100 Hz)	±3.3 %
Flicker	According to IEEE Std 1789-2015
CIE SVM	≤0.4
IEC-Pst	≤1
Output current tolerance	±5%
Temperature tolerance	±10%
Start-up time	<1.5S

# Safety

Withstanding voltage	I/P-O/P: 3.75kV&5mA&60S; I/P-DA1/DA2, O/P-DA1/DA2: 1.5kV&5mA&60S
Surge capability (L-N)	2kV
PUSH <sup>2)</sup>	1kV
Insulation resistance	I/P-O/P, I/P-DA1/DA2, O/P-DA1/DA2: > 100MΩ@500VDC
Guarantee	5 years <sup>3)</sup>


<sup>1)</sup> t =180µs

 $_{\rm 2)}$  The surge test wiring at the PUSH terminal is connected in parallel with L-N


<sup>3)</sup> **5 years @Tc≤83**℃

# Characteristic diagram


#### **Operating Window**

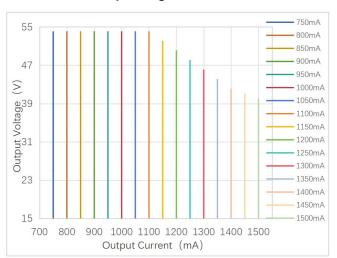

#### Typical Efficiency vs Load

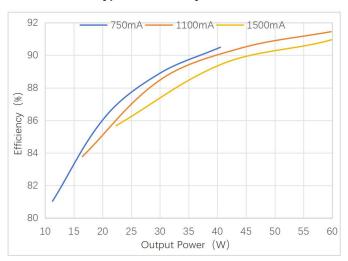


#### Typical Power Factor vs Load

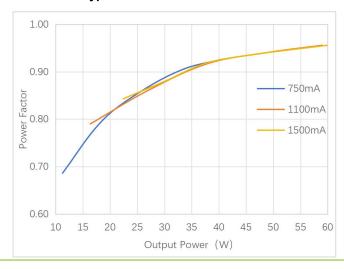


### Typical THD vs Load



# Lifespan

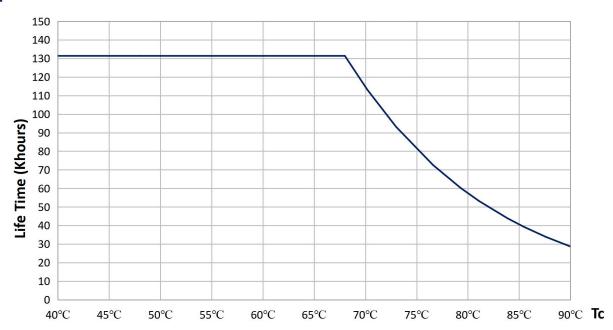

# **Dimensions**

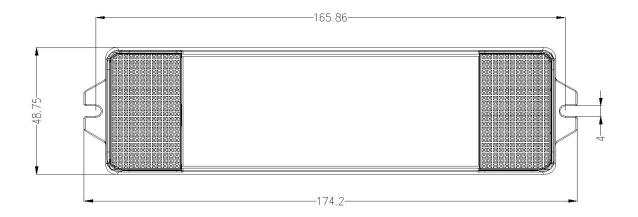



Mounting hole spacing, length	165.8mm
mounting froit spacing, tengur	100.011111
Product weight	188g
Cable cross-section, input side	0.75 1.5 mm²
Cable cross-section, output side	0.5 1.5 mm²
Wire diameter, input side	3-6mm
Wire diameter, output side	3-6mm
Wire preparation length, input side	7 8mm
Wire preparation length, output side	7 8mm
Length	174.2mm
Width	48.75mm
Height	27.7mm


# **Colors & materials**

Casing material	PC
Casing color	White

# Temperature & operating conditions

Ambient temperature range	-30℃ - +50℃
Maximum temperature at Tc test point	90°C
Temperature range at storage	-30°C - +80°C (6 months in Class I environment)
Humidity range at storage	20-75%RH (no condensation)
Humidity during operation	20-95%RH (no condensation)
Atmospheric pressure	86-106KPa
RoHS	RoHS 2.0 (EU) 2015/863

# Tc test point

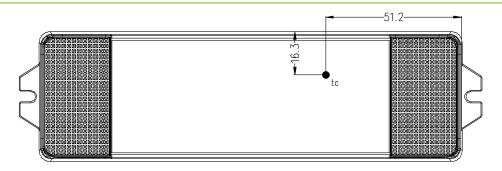

Tc point is at the top of LED driver

#### **Product terminal**

	Input	Output		
DA1/PUSH	DALI/PUSH dimming input	LED+	Positive terminal output of LED driver	
DA2/PUSH	DALI/PUSH dimming input	LED-	Negative terminal output of LED driver	
AC-L	Input terminal of AC live wire			
AC-N	Input terminal of AC neutral			
AC-N	wire			

# **Product DIP switch definition**

Vo DC	I rated (CC)	1	2	3	4
15-40V	1500	OFF	OFF	OFF	OFF
15-41V	1450	OFF	OFF	OFF	ON
15-42V	1400	OFF	OFF	ON	OFF
15-44V	1350	OFF	OFF	ON	ON
15-46V	1300	OFF	ON	OFF	OFF
15-48V	1250	OFF	ON	OFF	ON
15-50V	1200	OFF	ON	ON	OFF
15-52V	1150	OFF	ON	ON	ON
15-54V	1100	ON	OFF	OFF	OFF
15-54V	1050	ON	OFF	OFF	ON
15-54V	1000	ON	OFF	ON	OFF
15-54V	950	ON	OFF	ON	ON
15-54V	900	ON	ON	OFF	OFF
15-54V	850	ON	ON	OFF	ON
15-54V	800	ON	ON	ON	OFF
15-54V	750	ON	ON	ON	ON

Remark: when adjusting the output current via the DIP switch, please disconnect input AC first so as to use the DIP switch without the input AC connected.


# Over-voltage and under-voltage protection instructions

Protective Type		Min.	Тур.	Max.	Introduction
Input	Protective voltage	145Vac	150Vac	155Vac	When the input voltage is lower than
Under-voltage					the protective voltage, the light will be
Officer-voitage					off.
Protection	Restore voltage	156Vac	160Vac	165Vac	When the input voltage is higher than
	_				the restore voltage, the light can be
					automatically turned on.
Input	Protective voltage	310Vac	320Vac	330Vac	When the input voltage is higher than
·	, and the second				the protective voltage, the light will be
Over-voltage					off.
Protection	Restore voltage	261Vac	270Vac	278Vac	When the input voltage is lower than
					the restore voltage, the light can be
					automatically turned on.


Note: The factory default is to report only the input under-voltage and input over-voltage statuses, and will not turn off the light. It will enter the light-off protection mode only after being activated by software settings.

#### Protective characteristic curve

Input under-voltage protection diagram

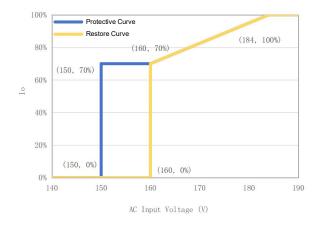

#### Input over-voltage protection diagram

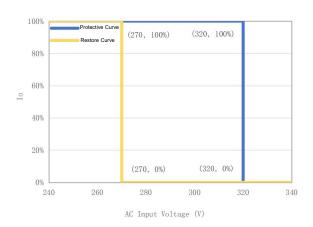


# **Capabilities**

Dimmable	DALI/PUSH dimmable
Dimming range	1 100%
Overload protection	Yes
Short circuit protection	Free of damage (Auto-recovery)
No load protection	<59V
Suitable for fixtures with prot. class	II
Programming interface	DALI
Control interface	DALI
Number of channels	1 channel
CorridorDIM	Yes
EL	Yes

CLO	Yes
DALI Part 251 252 253	Yes


# **Dimming function instructions**


### DALI dimming function

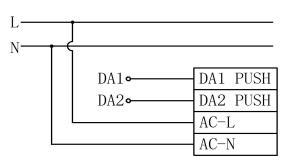

Wiring diagram of DALI dimming

- ① Default setting brightness is 100%.
- ② Connect DALI signal to DA1 PUSH and DA2 PUSH.
- ③ DALI protocol includes Max.16 scene groups.
- 4 Maximum number of LED drivers connected in parallel in DALI dimming mode: 64 pcs.
- ⑤ Minimum dimming depth of DALI dimming: 1%.

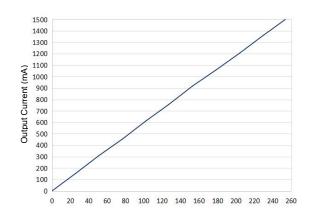

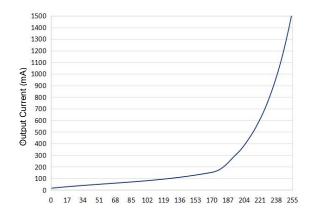


Linear dimming

Logarithmic dimming

Note: Choose only ONE as opposed to use DALI or PUSH at the same time in case of the damage of DALI dimmer.

### PUSH dimming function

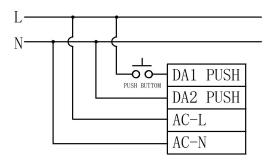

#### Wiring diagram of PUSH dimming


Switch from DALI mode to PUSH mode: short press PUSH switch to enable PUSH dimming function

- ① Connect PUSH switch between AC-L and DA1 PUSH in series and connect DA2 PUSH to AC-N.
- ② Make sure that AC-L and AC-N are NOT directly connected to DA1 PUSH and DA2 PUSH terminals.
- ③ Make sure that PUSH switch is off before the AC is powered on; operate PUSH after the AC is powered on.
- (4) Make sure the PUSH switch is off before disconnecting the AC.
- (5) If you have any questions about the wiring and operation, please confirm with Lifud FAE.
- 6 Wrong wiring or operation may cause damage to the driver.

Operation	Duration	Function	
Instant Push	0.1-0.5S	LED light on/off	
Long Push	0.6-9S	LED light dim up/down	
Reset Push	>9S	Reset the brightness of luminaire to 50%	

- ① The PUSH operation won't cause any variations on LED driver if it's less than 0.1S.
- 2 Minimum dimming depth of PUSH dimming: 1%
- ③ The PUSH dimming mode has the memory function in case of any power failure. When the LED driver is powered on again, the light will return to the previous state before power failure.
- ④ The present dimming direction of PUSH dimming is opposite to the former one.
- ⑤ In automatic mode, long press for more than 3 minutes to enter the corridor dimming function.

## Corridor dimming function

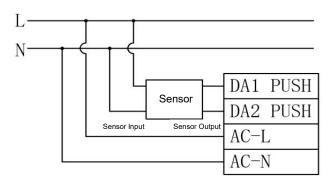

Wiring diagram of corridor dimming

#### Operations for entering corridor lighting mode

Approach 1: use Lifud programmer to enable the driver's corridor lighting mode and set parameters.

Approach 2: keep pressing PUSH for 3+ mins so as to switch to the corridor lighting mode.

Approach 3: keep moving in the effective sensing area for 3+ mins (set the sensor's hold time for 3+ mins) to enable the corridor lighting mode.

#### Remarks:

1. In the automatic detection mode, the driver can be switched from PUSH mode to corridor lighting mode by approach 2 and 3, its brightness will dim up to 50%; long press for 3 mins and then it dims down and then dims up, which means the driver has entered the corridor lighting mode.

- 2. After activating the corridor dimming mode, PUSH DIM is turned off.
- 3. In the case of AC input and any level of brightness in the corridor lighting mode, switching DC and then returning AC will restart the corridor lighting mode.

#### Operations for exiting corridor lighting mode

Approach 1: use Lifud programmer to choose other modes and exit corridor lighting mode.


Approach 2: connect to DALI master and send DALI command, the driver will return to the DALI dimming mode.

Approach 3: connect to the PUSH switch and continuously press it 10 times within 10 secs, the driver will return to the PUSH dimming mode.

#### Remark:

- 1. The 3-sec or above single press or release will cause the press number to be counted as 0.
- 2. The approach 2 and 3 CANNOT be used if the corridor lighting mode of driver is set via Lifud programmer.

#### Working process of corridor dimming mode

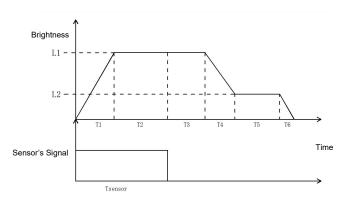

Symbol	Name	Default value	Available scope setting
T1	Fade-in time of sensing	1s	0-100s
T2	Holding time of sensing	Depends on sensor	Depends on sensor
Т3	Waiting time of sensing	180s	0-59999s, 60000s (infinite)
T4	Fade-out time of sensing	5s	0-100s
T5	Unattended time	60000s (infinite)	0-59999s, 60000s (infinite)
Т6	Fade-out off time	0s	0-100s
L1	Sensing brightness	100%	0-100%
L2	Unattended brightness	10%	0-100%

#### **Emergency function instructions**

The default output current is 15% Io max in the case of DC emergency input.

Emergency input voltage: 180-264Vdc

#### Note:

- 1. Emergency function can be set by Lifud programmer and programming software(or FEIG NFC reader)
- 2. It can be set from 0 to 100% (in the EL mode, the output current can be set to 750-1200mA, and the maximum output power is 48W).

- 3. If the emergency mode is off, input current is DC and the working mode is the same as the AC input.
- 4. In the case of mains input, the brightness is random when using PUSH dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will remain the one set via PUSH switch when mains is connected.
- 5. In the case of mains input, the brightness is random when using DALI dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will return to the brightness when DALI is powered on.

## Programmer tool and software


Product	Name	Brand	Model	Software
<b>2</b> 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Lifud programmer	LIFUD	LF-SCS080C	Lifud SmartSet

### Read/write and parameter configuration

Programming project	Default settings	Parameters settings	Read/Write
Production information	-	No	Read
Output current	1	1	1
Operating mode	Automatic detection (DALI/PUSH)	Yes	Read/Write
EL	15% (default)	Yes	Read/Write
CorridorDIM	Inactivated	Yes	Read/Write
CLO	Inactivated	Yes	Read/Write
DALI Part 251	Activated	Yes	Read/Write
DALI Part 252	Activated	Can only be reset	Read/Write
DALI Part 253	Activated	Can only be reset	Read/Write

# **Configuration function instructions**

#### Lifud programmer

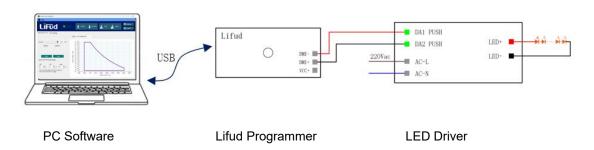

#### Certificates & standards

Approval marks – approval	ENEC, CE, CB, RCM, CCC, EL, DALI-2
	GB 19510.1-2009; GB 19510.14-2009; GB 7000.1-2015;
	GB 17625.1-2022; GB/T 17743-2021;
	EN 61347-2-13; EN 61347-1; EN 62384; EN 62493;
Standards	EN 55015; EN 61547; EN 61000-3-2; EN 61000-3-3;
	IEC61347-1; IEC61347-2-13;
	EN IEC 61347-2-13 Annex J;
	AS 61347.2.13 & AS/NZS 61347.1
Type of protection	IP20

### **Logistical Data**

Product	Packaging unit (Pieces/Unit)	Dimensions (L*W*H)	Volume	Gross weight
LF-ADD060-1500-54	48	310mm*285mm*155 mm	13.69 dm³	9.52kg±5%

#### **Test equipment & condition**

Test Equipment	AC power source: CHROMA6530, digital power meter: CHROMA66202, oscilloscope: Tektronix DPO3014, DC electronic load: M9712B, LED board, constant temperature and humidity chamber, lightning surge generator: Everfine EMS61000-5B, rapid group pulse generator: Everfine
	EMS61000-4A, spectroanalyzer: KH3935, hi-pot tester: EEC SE7440, flicker tester (flicker-free coefficient test): Everfine LFA-3000, etc.

If there are no special remarks, the above parameters are tested at the ambient temperature of 25°C, humidity of 50%, maximum output load and input voltage of 230Vac/50Hz.

#### **Additional information**

- 1. It is recommended that user install the over voltage protection, under voltage protection and surge protection devices in the power supply circuits of light fixtures to ensure electricity safety.
- 2. The LED driver used in combination with the end device is one of the accessories of the whole light fixture, and the EMC of the whole light fixture is not only susceptible to the driver itself, but to the LED light fixture and the whole light fixture's wiring. Thus, the manufacturer of LED light fixture should re-confirm the EMC of the whole light fixture before the whole light fixture is finished.
  - 3. Configure the quantity of circuit breakers based on inrush current and time.
- 4. The PC cover, casing and end cap for assembling the LED driver in the light fixture must meet the fire rating of UL94-V0 or above.
  - 5. DC input is only for emergency.
  - 6. The final interpretation of the above parameters belongs to Lifud.

#### **Transportation & storage**

Suitable transportation means: vehicles, boats and aeroplanes.

In transit, it is necessary to prepare awnings for rain or sun protection. Moreover, please keep civilized loading and unloading to prevent the vibration or impact of LED driver as much as possible.

The storage of LED driver shall conform to the standard of Class I environment. When using LED drivers which have been stored for more than 6 months, please re-test them firstly. Do not use them unless they are tested to be qualified.

#### **Cautions**

Please use Lifud LED driver according to its parameters in the specification, otherwise the LED driver may malfunction.

Using any incompatible light fixtures or those that have not been certified may cause fire, explosion or other risks.

Man-made damage is beyond the scope of Lifud warranty service.

#### **Disclaimer**

Subject to change without notice. Errors and omission excepted. Always make sure to use the most recent release. Lifud Technology Co., Ltd. reserves the right to interpret any contents of this specification.